



KB4 Electronic Keyboard 61-key

Ref. nr.: 130.108



INSTRUCTION MANUAL

Congratulations to the purchase of this Max Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Supplied contents:

- MAX Music KB4 keyboard
- Power supply
- Music sheet stand


POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS

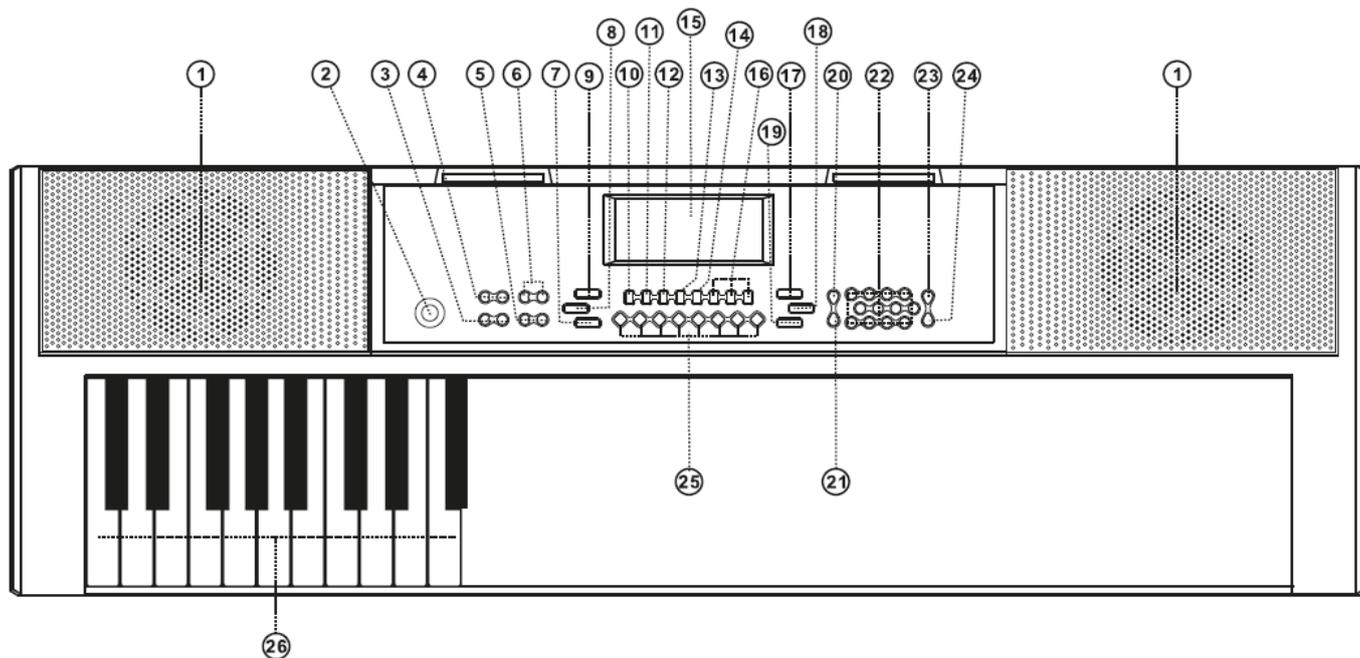

- 1. SPEAKERS**
Loudspeakers to reproduce the sound of the music played. Sound level is determined on the basis of the volume setting.
- 2. POWER ON/OFF**
Switch to turn the keyboard on or off.
- 3. TRANPOSE**
Press [Transpose +] or [Transpose -] to transpose the tone of the notes. The transpose may be adjusted from “-6” to “+6”. Pressing the two buttons simultaneously resets transpose to the default value.
- 4. MASTER VOLUME**
Press [Master Vol +] or [Master Vol -] to raise or lower the master volume. Press both simultaneously to reset to default value.
- 5. TEMPO**
Press [Tempo +] or [Tempo -] to increase or decrease the tempo. Press the two buttons simultaneously may reset to the default value.
- 6. ACCOM VOLUME**
Press [Accomp Vol +] or [Accomp Vol -] to raise or lower the accomp volume. Press both simultaneously to reset to default value.

7. **START/STOP**

Press to start or stop playing selected program.

8. **FILL-IN**

Press the [FILL-IN] button to add an interlude to the rhythm. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

9. **SYNC**

When in rhythm mode, press [SYNC]. "Syn" will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accomp rhythm.

10. **SINGLE CHORD**

Under the state that the rhythm is activated, press [SINGLE]. After "Sin" shows on the display, you can play a single chord on the keys in the chord zone of the keyboard. Press [SINGLE] again, "OFF" will appear on the display. The single chord function will be disenabled.

11. **FINGERED CHORD**

In this mode, you play the individual notes of the chord in your left hand. Under the state that the rhythm is activated, press [FINGERED]. After the "Fin" shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard. Press [FINGERED] again, "OFF" will appear on the display. The fingered chord function will be disenabled.

12. **RECORD**

Press [REC] to enable the recording function, "rEC" will show on the display. In this mode all played notes will be recorded. When storage is full, "FUL" will appear on the display and recording will stop automatically. Press [PLAY] to playback the recorded notes, "PLY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [PLAY] to playback the recorded rhythm.

13. **PROGRAM**

Press [PROG] to enable the rhythm programming function, "Prg" will show on the display and the keyboard percussion function will be activated. 32 Percussions can be programmed at maximum, after that "FUL" will appear on the display and programming will stop automatically. Press [PLAY] to playback the programming rhythm. Press [START/STOP] or press [PROG] again to disenable the programming function. All recorded rhythms will be removed.

14. **PLAY**

Press to playback recorded notes or rhythms.

15. **LED DISPLAY**

Displays current mode, notes to play, rhythm, tempo, etc.

16. **ONE-KEY TRAINING**

Press [One Key] to enable the single key training function. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [One Key] button to disenable the training function.

FOLLOW TRAINING

Press [Follow] to enable the follow function. Press "+" / "-" button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [Follow] to disenable the training function.

ENSEMBLE TRAINING

Press [Ensemble] to enable the ensemble function. Press "+" / "-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [Ensemble] to disenable the training function.

17. **DEMO SONG**

This keyboard has 24 stored demo songs ("000" to "023") for your selection. Press [DEMO SONG] and the demo songs will start to play in order. During playing process, press [DEMO SONG] to play the next demonstration song. Press [START/STOP] to stop playing. During the playing process, you can also press the num pad buttons or the "+" / "-" buttons to select other demonstration songs. The selected demonstration song will then play repeatedly.

18. **METRONOME**

There are 4 kinds of metronomes stored on the keyboard: 1/4 beat, 2/4 beat, 3/4 beat and 4/4 beat. Press [Metronome] once to set the rhythm at 1/4 beat, twice for 2/4 beat, etc. press for fifth time to cancel function.

19. **KEYBOARD PERCUSSION**

This Keyboard provides 61 kinds of **keyboard** percussions. Press [Percussion] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disenable the keyboard percussion function.

20. **SUSTAIN**

Press [Sustain] and the sustain effect will be activated. Press this button again and the sustain effect will be disenabled.

21. **VIBRATO**

Press the [Vibrato] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disenabled.

22. **NUM PAD**

Numeric keys to enter an accurate value.

23. **TIMBRE**

Press [TIMBRE] to enable the tone selection function. This keyboard provides 255 timbres ("000" to "254") for your selection. The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

24. RHYTHM

Rhythm selection:

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm] to initiate the rhythm selection function. Press the numeric keys or the "+"/"-" buttons to select other rhythms.

Rhythm enabling:

Press [START/STOP] to start accomp rhythm. While in enable state: Press [SYNC], "Syn" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [START/STOP] to stop the accomp rhythm.

Interlude:

After the accomp rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accomp rhythm.

25. PERCUSSIONS

This Keyboard provides 8 kinds of **panel** percussions. Press one of eight to play the corresponding percussion. Percussion instruments can be added to enhance the atmosphere as required.

26. CHORD ZONE

Chord key zone (1st-19th key from left).

CONNECTIONS

27. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.


28. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disenabled automatically.

You can perform without disturbing others and other disturbing you.

29. DC 9V INPUT

Socket for plugging in the supplied power adapter.

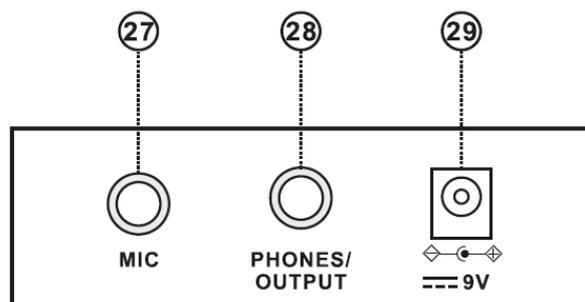

AUTO RHYTHM

Rhythm selection

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm] to initiate the rhythm selection function. Press the numeric keys or the "+"/"-" buttons to select other rhythms.

Rhythm control

1. Rhythm enabling

Press [START/STOP] to start accomp rhythm. While in enable state: Press [Sync], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated.

2. Interlude

After the accomp rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accomp rhythm.

3. Stop rhythm

Press [START/STOP] to stop the accomp rhythm.

Tempo adjustment

Press [Tempo +] or [Tempo -] to increase or decrease the tempo. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

EFFECT CONTROL

Sustain function

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disenabled.

Vibrato function

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disenabled.

RECORDING AND RHYTHM PROGRAMMING

Recording

Press [REC] to enable the recording function, "rEC" will show on the display. In this mode all played notes will be recorded. When storage is full, "FUL" will flash on the display and recording will stop automatically. Press [PLAY] to playback the recorded notes, "PLA" will show on the screen. On completion of playback, "rEC" will show on the display. You can record a new rhythm, or you can press [PLAY] to playback the recorded rhythm.

Rhythm programming

Press [PROG] to enable the rhythm programming function, "Prg" will show on the display and the keyboard percussion function will be activated. 32 Percussions can be programmed at maximum, after that "FUL" will appear on the display and programming will stop automatically. Press [PLAY] to playback the programming rhythm. Press [START/STOP] or press [PROG] again to disenable the programming function. All recorded rhythms will be removed.

TRAINING METHODS

Training I: One key

Press [ONE KEY] to enable the single key training function. Press “+”/“-” button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [ONE KEY] button to disable the training function.

Training II: Follow

Press [FOLLOW] to enable the follow function. Press “+”/“-” button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [FOLLOW] to disable the training function.

Training III: Ensemble

Press [ENSEMBLE] to enable the ensemble function. Press “+”/“-” button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [ENSEMBLE] to disable the training function.

RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



PIANO DUST BUSTER

PIANO DUST BUSTER is the ultimate introduction to piano for kids. No previous piano experience needed!



PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (*IOS compatible only!)



PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (*IOS-IPAD compatible only!)



SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(* Compatible with both IOS and ANDROID devices)



APPENDIX I. TIMBRE TABLE AND RHYTHM TABLE

Timbre Table

000-068	105 Harp 6	143 Lead Square 6	181 Vibrato E-Bass 3	219 Edge Trumpet 8
Refer to the unit panel	106 String Ensemble 4	144 Long Piano 2	182 Violin 5	220 Edge Synth Brass 5
069 Electric Bass 5	107 Trumpet 4	145 Vibrato Music Box 5	183 Viola 5	221 Alto Sax 11
070 Edge Violin 3	108 Synth Brass 6	146 Vibrato Vibraphone 4	184 Cello 4	222 Clarinet 11
071 Edge Viola 3	109 Alto Sax 5	147 Vibrato Accordion 3	185 Long Harp 3	223 Edge Square 5
072 Edge Cello 3	110 Clarinet 5	148 Acoustic Bass 6	186 String Ensemble 7	224 Acoustic Grand Piano 7
073 Harp 4	111 Lead Square 4	149 Electric Bass 7	187 Trumpet 5	225 Music Box 6
074 String Ensemble 2	112 Vibrato Piano 4	150 Edge Violin 7	188 Synth Brass 8	226 Vibraphone 7
075 Trumpet 2	113 Vibrato Music Box 4	151 Edge Viola 7	189 Alto Sax 9	227 Edge Accordion 8
076 Synth Brass 4	114 Vibraphone 4	152 Edge Cello 8	190 Clarinet 9	228 Acoustic Bass 10
077 Alto Sax 3	115 Edge Accordion 4	153 Long Harp 1	191 Lead Square 8	229 Long E-Bass 4
078 Clarinet 3	116 Long Acoustic Bass 2	154 String Ensemble 5	192 Acoustic Grand Piano 6	230 Violin 7
079 Edge Square 3	117 Long E-Bass 1	155 Edge Trumpet 6	193 Music Box 5	231 Edge Viola 9
080 Long Piano 1	118 Violin 3	156 Edge Synth Brass 4	194 Vibraphone 6	232 Edge Cello 9
081 Long Music Box 1	119 Viola 3	157 Edge Sax 3	195 Edge Accordion 7	233 Harp 9
082 Long Vibraphone 1	120 Edge Cello 6	158 Edge Clarinet 3	196 Acoustic Bass 8	234 Edge String 6
083 Accordion 2	121 Harp 7	159 Edge Square 4	197 Electric Bass 8	235 Edge Trumpet 9
084 Vibrato Acoustic Bass 2	122 Edge String 4	160 Acoustic Grand Piano 5	198 Edge Violin 8	236 Synth Brass 10
085 Vibrato E-Bass 1	123 Edge Trumpet 4	161 Vibrato Music Box 6	199 Edge Viola 8	237 Alto Sax 12
086 Edge Violin 4	124 Edge Synth Brass 2	162 Vibrato Vibraphone 5	200 Cello 5	238 Clarinet 12
087 Edge Viola 4	125 Alto Sax 6	163 Edge Accordion 6	201 Long Harp 4	239 Lead Square 10
088 Edge Cello 4	126 Clarinet 6	164 Acoustic Bass 7	202 String Ensemble 8	240 Long Piano 5
089 Harp 5	127 Lead Square 5	165 Long E-Bass 2	203 Trumpet 6	241 Long Music Box 4
090 String Ensemble 3	128 Acoustic Grand Piano 4	166 Violin 4	204 Synth Brass 9	242 Long Vibraphone 3
091 Trumpet 3	129 Music Box 4	167 Viola 4	205 Alto Sax 10	243 Edge Accordion 9
092 Synth Brass 5	130 Vibraphone 5	168 Cello 3	206 Clarinet 10	244 Acoustic Bass 11
093 Alto Sax 4	131 Edge Accordion 5	169 Long Harp 2	207 Lead Square 9	245 Electric Bass 9
094 Clarinet 4	132 Acoustic Bass 5	170 String Ensemble 6	208 Long Piano 4	246 Edge Violin 9
095 Lead Square 3	133 Electric Bass 6	171 Edge Trumpet 7	209 Long Music Box 3	247 Edge Viola 10
096 Vibrato Piano 3	134 Edge Violin 6	172 Synth Brass 7	210 Long Vibraphone 2	248 Edge Cello 10
097 Vibrato Music Box 3	135 Edge Viola 6	173 Alto Sax 8	211 Accordion 3	249 Harp 10
098 Vibrato Vibraphone 3	136 Edge Cello 7	174 Clarinet 8	212 Acoustic Bass 9	250 Edge String 7
099 Vibrato Accordion 2	137 Harp 8	175 Lead Square 7	213 Long E-Bass 3	251 Edge Trumpet 10
100 Long Acoustic Bass 1	138 Edge String 5	176 Long Piano 3	214 Violin 6	252 Edge Synth Brass 6
101 Vibrato E-Bass 2	139 Edge Trumpet 5	177 Long Music Box 2	215 Viola 6	253 Edge Sax 4
102 Edge Violin 5	140 Edge Synth Brass 3	178 Vibrato Vibraphone 6	216 Cello 6	254 Edge Clarinet 4
103 Edge Viola 5	141 Alto Sax 7	179 Vibrato Accordion 4	217 Long Harp 5	
104 Edge Cello 5	142 Clarinet 7	180 Vibrato Acoustic Bass 3	218 String Ensemble 9	

Rhythm Table

000-086	119 Funky Disco	153 Pasodoble 2	187 Chrlston	221 Hip Beat 2
Refer to the unit panel	120 Latin Beat	154 Samba 3	188 Detroit	222 Fusion 3
087 Rock Ballad 1	121 Ober Polka 2	155 Samba 4	189 Dance Pop	223 Electro Pop 3
088 Reggae 1	122 Unplugged 2	156 Schlager Rock 3	190 Espag Nol	224 Tijuana Beat 2
089 Slow & Easy 1	123 Saturday Night 2	157 Schlager Alp 1	191 Fast Gospel	225 Tarantella 3
090 Swing Waltz	124 Pop Ballad 2	158 Tarantella 2	192 Ground Beat	226 Schlager Alp 2
091 Pub Piano 1	125 Blue Grass 4	159 Tijuana Beat 1	193 Guad Dance	227 Schlager Rock 4
092 Jazz Big Band 1	126 Blue Grass 5	160 Electro Pop 2	194 Modern Cha Cha	228 Samba 5
093 Jazz Club 1	127 Blue Grass 6	161 Fusion 2	195 Merengue	229 Samba 6
094 Jazz Waltz 1	128 Slow Soul 2	162 Hip Beat 1	196 Pasodobl	230 Pasodoble 3
095 Jazz Waltz 2	129 Bright Pop 1	163 Limbo Rock 2	197 Rave	231 Modern R&B 3
096 Jazz Rock 1	130 Club Latin 2	164 Acoustic Ballad 2	198 Sy Boogie	232 Modern Country Pop 3
097 Salsa 1	131 Disco Chocolate 2	165 Piano Ballad 2	199 Seville	233 Medium Jazz 3
098 Analog Ballad 1	132 Disco Fox 2	166 R&B Ballad 2	200 Big Band Ballad 2	234 Love Song 3
099 Show Tune 1	133 Disco Funk 2	167 Rock Ballad 2	201 68 Beat Ballad 2	235 Jive 3
100 China Style	134 Disco Hands 2	168 Reggae 2	202 16 Beat Ballad 2	236 Hully Gully 3
101 Slow Rock 4	135 Disco Latin 2	169 Slow & Easy 2	203 68 Beat Blues 2	237 Hard Rock 3
102 Slow Rock 5	136 Disco Party 2	170 Swing Beat 1	204 Show Tune 3	238 Country Ballad 3
103 Slow Beat	137 Disco Samba 2	171 Pub Piano 2	205 Analog Ballad 3	239 8 Beat Modern 3
104 70's Soul 2	138 Dixie Jazz 2	172 Jazz Big Band 2	206 Salsa 3	240 Rumba 3
105 Straight Rock 2	139 Pop New Age 2	173 Jazz Club 2	207 Jazz Rock 3	241 Club Dance 3
106 Techno 3	140 UK Pop 3	174 Jazz Beat 1	208 Jazz Beat 4	242 USA March 3
107 Mambo 3	141 USA March 2	175 Jazz Beat 2	209 Jazz Beat 3	243 UK Pop 4
108 Country 3	142 Club Dance 2	176 Jazz Rock 2	210 Jazz Club 3	244 Pop New Age 3
109 8 Beat Adria 2	143 Rumba 2	177 Salsa 2	211 Jazz Big Band 3	245 Dixie Jazz 3
110 Big Band Shuffle 2	144 8 Beat Modern 2	178 Analog Ballad 2	212 Pub Piano 3	246 Disco Samba 3
111 Big Band Middle 3	145 Country Ballad 2	179 Show Tune 2	213 Swing Beat 2	247 Disco Party 3
112 Big Band Middle 4	146 Hard Rock 2	180 68 Beat Blues 1	214 Slow & Easy 3	248 Disco Latin 3
113 Big Band Fast 1	147 Hully Gully 2	181 16 Beat Ballad 1	215 Reggae 3	249 Disco Hands 3
114 Big Band Fast 2	148 Jive 2	182 68 Beat Ballad 1	216 Rock Ballad 3	250 Disco Funk 3
115 Bolero 2	149 Love Song 2	183 Big Band Ballad 1	217 R&B Ballad 3	251 Disco Fox 3
116 Cat Groove 2	150 Medium Jazz 2	184 West Shuffle	218 Piano Ballad 3	252 Disco Chocolate 3
117 Classic Piano 2	151 Modern Country Pop 2	185 Calypso	219 Acoustic Ballad 3	253 Club Latin 3
118 Cumbia 2	152 Modern R&B 2	186 Casa	220 Limbo Rock 3	254 Bright Pop 2

TECHNICAL SPECIFICATION

Power Supply	: 100-240VAC 50/60Hz
Weight	: 7,90 kg
Dimensions	: 834 x 265 x 87mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2020 by Tronios The Netherlands