



KB3 Electronic Keyboard 61-key Touch Function

Ref. nr.: 130.106



INSTRUCTION MANUAL

Congratulations to the purchase of this Max Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Supplied contents:

- MAX Music KB3 keyboard
- Power supply
- Music sheet stand


POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS

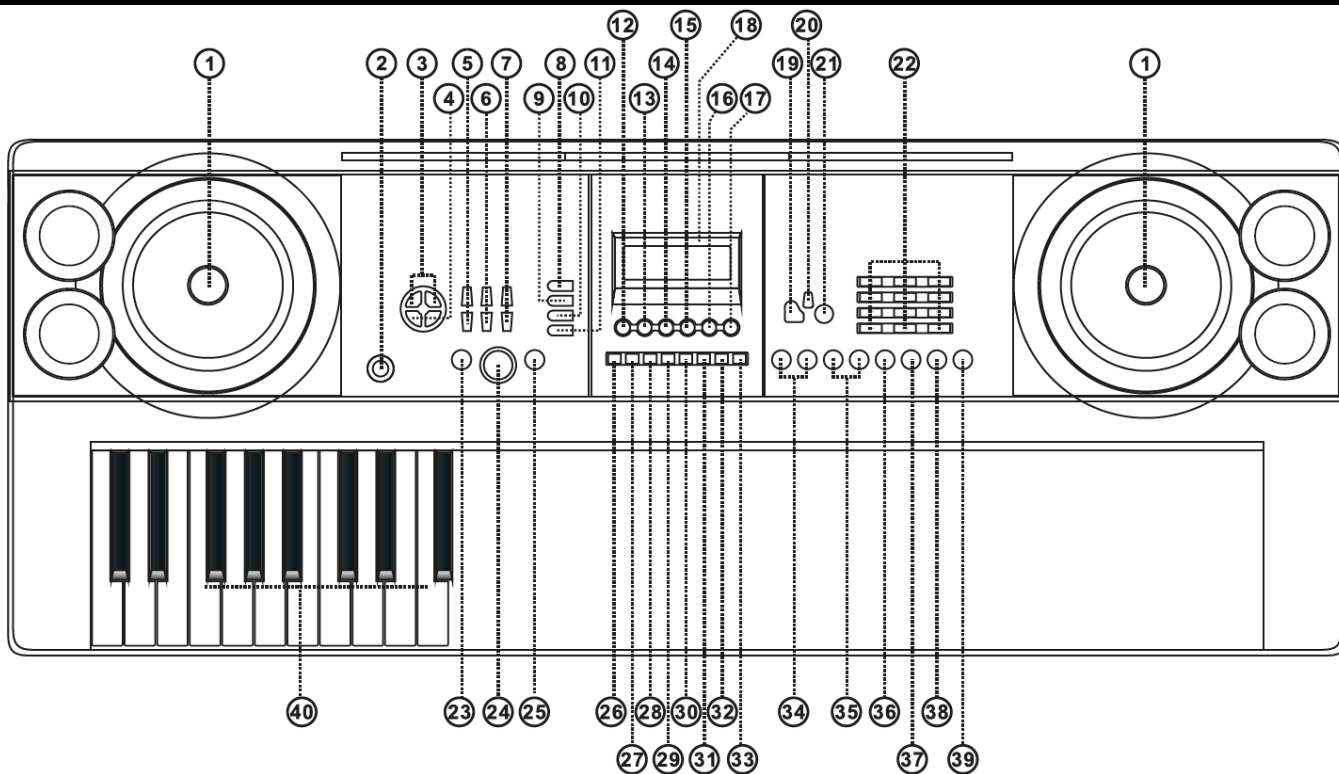

- 1. SPEAKERS**
Loudspeakers to reproduce the sound of the music played. sound level is determined on the basis of the volume setting.
- 2. POWER ON/OFF**
Switch to turn the keyboard on or off.
- 3. MASTER VOLUME**
Press [Master Vol +] or [Master Vol -] to raise or lower the master volume. Press both simultaneously to reset to default value.
- 4. ACCOMP VOLUME**
Press [Accomp Vol +] or [Accomp Vol -] to raise or lower the accomp volume. Press both simultaneously to reset to default value.
- 5. TEMPO**
Press [Tempo +] or [Tempo -] to increase or decrease the rhythm speed. Pressing the two buttons simultaneously may reset to the default tempo.
- 6. TRANPOSE**
Press [Transpose +] or [Transpose -] to transpose the tone of the notes. The transpose may be adjusted from “-6” to “+6”. Pressing the two buttons simultaneously resets transpose to the default value.

7. TUNE

Press [Tune +] or [Tune -] to accurately correct the pitch from “-99” to “+99”. Pressing the two buttons simultaneously resets pitch to the default value.

8. SINGLE CHORD

When rhythm is activated, press [Single]. After “SIN” shows on the display, you can play a single chord on the keys in the chord zone of the keyboard. Press [Single] again, “SIN” will disappear from the display. The single chord function will be disabled.

9. FINGERED CHORD

In this mode, you play the individual notes of the chord with your left hand. Under the state that the rhythm is activated, press [Fingered]. After the “FIN” shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard. Press [Fingered] again, “FIN” will disappear from the display. The fingered chord function will be disabled.

10. CHORD TIMBRE

Press [Chord Timbre] to change the tone (timbre) of the chord accompaniment. Press again to return to original timbre.

11. CHORD CLOSE

Press [Chord Close] to stop the chord.

12. METRONOME

There are 4 kinds of metronomes stored on the keyboard: 1/4 beat, 2/4 beat, 3/4 beat and 4/4 beat. Press [Metronome] once to set the rhythm at 1/4 beat, twice for 2/4 beat, etc. press for fifth time to cancel function.

13. ONE-KEY TRAINING

Press [One Key] to enable the single key training function, “LEARN” will show on the display. Press [SONG] and then the “+”/“-” buttons to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [One Key] button to disable the training function.

14. FOLLOW TRAINING

Press [Follow] to enable the follow function, “LEARN” will show on the display. Press [SONG] and then the “+”/“-” buttons to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disable the training function.

15. ENSEMBLE TRAINING

Press [Ensemble] to enable the ensemble function, “LEARN” will show on the display. Press [SONG] and then the “+”/“-” buttons to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disable the training function.

16. DEMO ONE

This keyboard has stored 20 demo songs (“000” to “019”) for your selection. Press [DEMO ONE] to play one demo song in repeat.

17. DEMO ALL

This keyboard has stored 20 demo songs (“000” to “019”) for your selection. Press [DEMO ALL] to play all available demo song in sequence.

18. LCD DISPLAY

Displays current mode, notes to play, rhythm, tempo, etc.

19. TIMBRE

The keyboard provides 200 timbres (“000” to “199”) to select. When turning on the keyboard, the timbre selection function will be turned on automatically. When in other modes, press the [TIMBRE] button to enable the function. “TONE” will show on the display if successful. The timbre is defaulted to be “000”, and it can be adjusted by pressing the corresponding number buttons or pressing the “+”/“-” button.

20. TOUCH

Press [TOUCH] to turn the touch function on or off. When turning the keyboard on, touch mode is default. The display shows “Touch”. This function can help to enrich musical expression and correctly reflect the force you apply on the keys. The larger the force, the louder the sound.

21. RHYTHM

Rhythm selection: This Keyboard provides 200 rhythms (“000” to “199”) for your selection. The rhythm is defaulted to be “000”. Press [Rhythm], “RHYM” will show on the display. Press the numeric keys or the “+”/“-” buttons to select other rhythms.

Rhythm enabling: Press [Start/Stop] to start accomp rhythm. While in enable state: Press [Sync], “SYN” will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [Start/Stop] to stop the accomp rhythm.

Interlude: After the accomp rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accomp rhythm.

22. NUM PAD

Numeric keys to enter an accurate value.

23. SYNC

When in rhythm mode, press [Sync]. “SYN” will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accomp rhythm.

24. START/STOP

Press to start or stop playing selected program.

25. FILL-IN

Press the [FILL-IN] button to add a fill to the accompaniment rhythm of your song. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

26. RECORD

Press [Rec] to enable the recording function, "RECORD" will show on the display. In this mode all played notes will be recorded. Press [Play] to playback the recorded notes, "PLAY" will show on the display. When storage is full, "REC" will show on the display and recording will stop automatically.

27. PLAY

Press to playback recorded notes or rhythms.

28. PROGRAM

Press [Prog] to enable the rhythm programming function, "PROG" will show on the display and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. Programming will stop automatically when memory is full. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disable the programming function. All recorded rhythms will be removed.

29. NULL PLAY

Press [Null Play] to play the edited rhythm repeatedly. "Play" will show on the display.

30. SUSTAIN

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disabled.

31. VIBRATO

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disabled.

32. SPLIT

Press the [Split] button to divide the keyboard keys into two parts. "SPLIT" will appear on the display. The timbre of the two parts can be different, as the left part keeps the primary timbre but the right part can gain another timbre. Meanwhile, the pitch of the left part rises by 8 degrees while that of the right part falls by 8 degrees. Press the [Split] button again to stop the function. This function stops when auto-chord is enabled.

33. KEYBOARD PERCUSSION

This Keyboard provides several percussions. Press [Keyboard Percussion] to turn the keyboard into percussion keyboard, each key corresponds to one percussion instrument. Press this button again to disable the keyboard percussion function.

34. VOLUME CONTROL

Buttons to raise and lower MP3 volume.

35. PREVIOUS / NEXT

Buttons to select previous and next song.

36. PLAY / PAUSE

Press to start/resume or pause MP3 play.

37. STOP

Press to stop MP3 play.

38. CONTINUOUS / RANDOM / SINGLE PLAYBACK

Press to select a repeat mode.


39. EFFECT

Press to select different effects.

40. CHORD ZONE

Chord key zone (1st-19th key from left).

CONNECTIONS

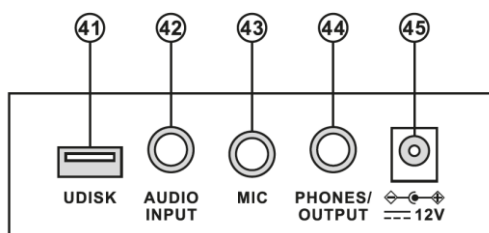

41. USB SLOT

Insert a USB flash disk into this port on the rear of the Keyboard for MP3 music playing. Supports 32G max.

42. AUDIO INPUT

Turn off the keyboard and external audio device of choice. Connect one end of the audio cable to the INPUT port on the rear panel of the keyboard, connect the other end to the audio port of the device.

43. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.

44. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disabled automatically. You can perform without disturbing others and other disturbing you.

45. DC 12V INPUT

Socket for plugging in the supplied power adapter.

AUTO RHYTHM

Rhythm selection

This Keyboard provides 200 rhythms ("000" to "199") for your selection. The rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the display. Press the numeric keys or the "+"/"-" buttons to select other rhythms.

Rhythm control

1. Rhythm enabling

Press [Start/Stop] to start accomp rhythm. While in enable state: Press [Sync], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [Start/Stop] to stop the accomp rhythm.

2. Interlude

After the accomp rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accomp rhythm.

3. Stop rhythm

Press [Start/Stop] to stop the accomp rhythm.

Tempo adjustment

Press [Tempo +] or [Tempo -] to increase or decrease the tempo. Pressing the two buttons simultaneously may reset to the default value tempo/min.

EFFECT CONTROL

Sustain function

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disenabled.

Vibrato function

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disenabled.

RECORDING AND RHYTHM PROGRAMMING

Recording

Press [Rec] to enable the recording function, "RECORD" will show on the display. In this mode all played notes will be recorded. Press [Play] to playback the recorded notes, "PLAY" will show on the display. When storage is full, "REC" will show on the display and recording will stop automatically.

Rhythm programming

Press [Prog] to enable the rhythm programming function, "PROG" will show on the display and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. Programming will stop automatically when memory is full. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disenable the programming function. All recorded rhythms will be removed.

TRAINING METHODS

Training I: One key

Press [One Key] to enable the single key training function, "LEARN" will show on the display. Press [SONG] and then the "+"/"-" buttons to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [One Key] button to disenable the training function.

Training II: Follow

Press [Follow] to enable the follow function, "LEARN" will show on the display. Press [SONG] and then the "+"/"-" buttons to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disenable the training function.

Training III: Ensemble

Press [Ensemble] to enable the ensemble function, "LEARN" will show on the display. Press [SONG] and then the "+"/"-" buttons to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disenable the training function.

RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



PIANO DUST BUSTER

PIANO DUST BUSTER is the ultimate introduction to piano for kids. No previous piano experience needed!



PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (*IOS compatible only!)



PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (*IOS-IPAD compatible only!)



SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(* Compatible with both IOS and ANDROID devices)



APPENDIX 1 & 2 TIMBRE AND RHYTHM TABLE

1. Timbre

000-100	125 Puff Harmonica 2	151 Woodblock 2	177 Grow Guitar
Refer to the unit panel	126 Ukulele 2	152 Synth Harpsi. 3	178 Didgeridoo 1
101 Pi Pa 3	127 12-str. Gt 2	153 Attack Clav. 3	179 Attack Barafon
102 Feedback Gt. 2	128 Guitar Pinch 4	154 Crystal 2	180 Mute Barafon 1
103 Uilleann Harp 2	129 Slow Violin 2	155 Bag Pipe 2	181 Nay
104 Jazz Bass 2	130 Bright String 2	156 Barafon 2	182 Soft Santur
105 Flugel Horn 2	131 Jungle Bass 4	157 Organ Flute 2	183 Dual Horns 1
106 Muted Horn 2	132 Indian Flute 2	158 Kalimba 4	184 Hard Barsoon 1
107 Wood Barafon 3	133 Clavi 4	159 Reed Horn 2	185 Tron Flute
108 Electric Piano 4	134 Celesta 4	160 Hard Vibe 4	186 Kawala 1
109 Multi Reed 2	135 Church Bells 2	161 Twin Bones 2	187 Jazz Organ
110 Guitar Pinch 3	136 Marimba 4	162 Synth Harpsi. 4	188 Soft Accord
111 Multi Wind 2	137 Dulcimer 3	163 Attack Clav. 4	189 Wind Organ
112 Clavi 3	138 Reed Organ 4	164 Chorus Guitar 2	190 Viola Attack
113 Celesta 3	139 Electric Guitar (Clean) 3	165 Steel Bell 4	191 Bari & Tenor
114 Harpsichord 2	140 Koto 3	166 Tsugaru 2	192 Soft Sax 2
115 Mellow Fm 2	141 Xylophone 3	167 Oct Harp 2	193 Attack Harp 2
116 Pi Pa 4	142 Shanai 2	168 Bodhran 2	194 Didgeridoo 2
117 Upright Piano 2	143 Dulcimer 4	169 Tubular Bells 3	195 Dual Horns 2
118 Electric Piano 5	144 English Horn 2	170 Suona 2	196 Hard Barsoon 2
119 Hard Vibe 3	145 Electric Guitar (Clean) 4	171 Castanets 2	197 Kawala 2
120 Wood Barafon 4	146 Shamisen 2	172 Attack Harp 1	198 Soft Guitar 2
121 Music Box 2	147 Koto 4	173 Electric Vraphone	199 Mute Barafon 2
122 Marimba 3	148 Kalimba 3	174 Soft Sax 1	
123 Santur 2	149 Steel Bell 3	175 Soft Clav.	
124 Reed Organ 3	150 Alto Sax 2	176 Soft Guitar 1	

2. Rhythm

000-117	142 Detroit	168 Modern R&B 3	194 3 Cat Groove 3
Refer to the unit panel	143 Fanatical Sand	169 Club Dance 3	195 Country Slow Rock
118 Pop New Age 2	144 European Rock	170 Country Bossanova	196 Rock Disco
119 Jazz Swing	145 Ground Beat	171 Jazz Bo	197 16 Beat Shuffle 2
120 Merengue	146 8 Beat Modern 2	172 Modern Cha Cha	198 Jazz 8 Beat 2
121 Rave	147 Jazz Disco	173 Pop Reggae	199 Casa
122 Acoustic Ballad 2	148 Dixie Jazz 2	174 Rock Samba	
123 India's Indigenous	149 Disco Chocolate 2	175 Jazz 8 Beat 1	
124 Indonesian Pop	150 Disco Latin 2	176 Disco	
125 Pop Ballad 2	151 Pop Waltz 2	177 Seville	
126 South Africa Country	152 Saturday Night 2	178 Disco Hands 2	
127 South Africa Polka	153 Club Dance 2	179 Rock Ballad 2	
128 Tarantella 2	154 Tricks Bossanova	180 Mixed Bossanova	
129 Flash Pop	155 Tarantella 3	181 Jazz 16 Beat	
130 Pub Piano 2	156 March	182 Single 16 Beat 1	
131 West Shuffle	157 Espag Nol 2	183 Love Song 2	
132 Big Band Fast 4	158 Club Latin 2	184 Single 16 Beat 2	
133 Espag Nol 1	159 Jazz Cha Cha	185 Disco Fox 2	
134 Disco Funk 2	160 Country Cha Cha	186 Pop Rock 2	
135 Pop Mambo	161 Disco Party 2	187 Tijuana Waltz	
136 Europe Swing	162 Modern R&B 2	188 UK pop 3	
137 Tricks Latin	163 8 beat Pop 2	189 Show Tune 2	
138 Disco Samba 2	164 Country Jazz	190 Schlager Alp 2	
139 Latin Waltz	165 Slow Rock 4	191 Single Rock	
140 Dance Pop	166 Rumba 2	192 Wing Waltz 2	
141 Jazz Rock 3	167 Samba 3	193 Slow Waltz	

TECHNICAL SPECIFICATION

Power Supply	: 100-240VAC 50/60Hz (12V Adapter)
Weight	: 4,20 kg
Dimensions	: 965 x 368 x 157mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2020 by Tronios The Netherlands